

INSTALLATION INSTRUCTION FOR FIXTURE 1349-177

WARNING! SHUT OFF THE POWER AT FUSE OR CIRCUIT BREAKER.

ASSEMBLY THE FIXTURE(Fig.2)

1. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
2. Thread the nipple (B) into the coupling (G), and lock it in place by hex nut (F) tightly;
3. Slide the check ring (E), upper column (D) over the nipple (B) in order, and secure with knob nut (C);
4. Thread the fixture loop (A) onto the nipple (B) tightly;
5. Assemble the arm (L) onto the lower column (N) using ball screws (M) & (H);
6. Put the glass shade (J) over the socket (I) and secure with socket ring;
7. Install the light bulbs in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

MOUNTING THE FIXTURE(Fig.1)

1. Shut off the power supply at the fuse box or circuit breaker box. Remove the old fixture from ceiling. Including the cross bar.
2. Thread the nipple(I) into the collar loop(J) until snug.
3. Thread the other end of nipple(I) into the cross bar(F) until snug.
4. Place lock washer(E) over the end of nipple(I) protruding through cross bar(F) and thread hex nut(D) onto nipple until tight.
5. Take this crossbar assembly and mount to ceiling outlet box(A) using outlet box screw(H) tightly. The side of cross bar marked with "GND" must face out.
6. Use a pair of pliers to open one end link of the chain and connect to the fixture loop(A). Close the link.
7. By measuring, determine correct number of links needed for proper hanging height. Using pliers, disconnect and discard remaining chain.
8. Lace the fixture wires through the chain.
9. Slip collar ring(L) over the chain, then do the same with canopy (K).
10. Open the other end link of the chain and connect to the collar loop(J). Close the link.
11. Feed the fixture wires through the collar loop (J) and nipple(I) and pull until taut.

CONNECTING THE WIRE (See fig.3)

1. Take the black wire from the ceiling outlet box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug.
2. Repeat same process with white junction box wire and ribbed wire leg of fixture wire. **NOTE** :Twist wire together in the same direction, then twist the wire connector onto wire.
3. If your outlet box has a grounding wire (Green or bare copper).Attach this wire and the bare copper wire from the fixture together as step 1. If outlet box has no ground wire. Attach the bare copper fixture wire to the green ground screw on the cross bar.
4. Tuck these wires connectors neatly into the ceiling out let box and raise the collar ring (L) and thread onto collar loop(J) protruding through canopy.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.2

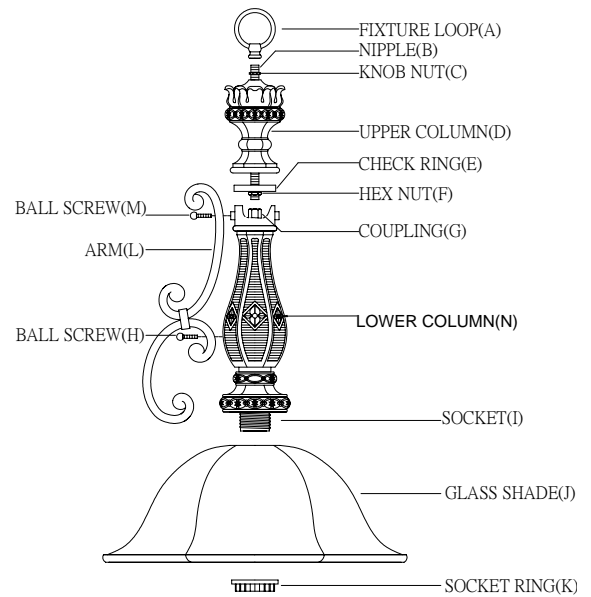


Fig.1

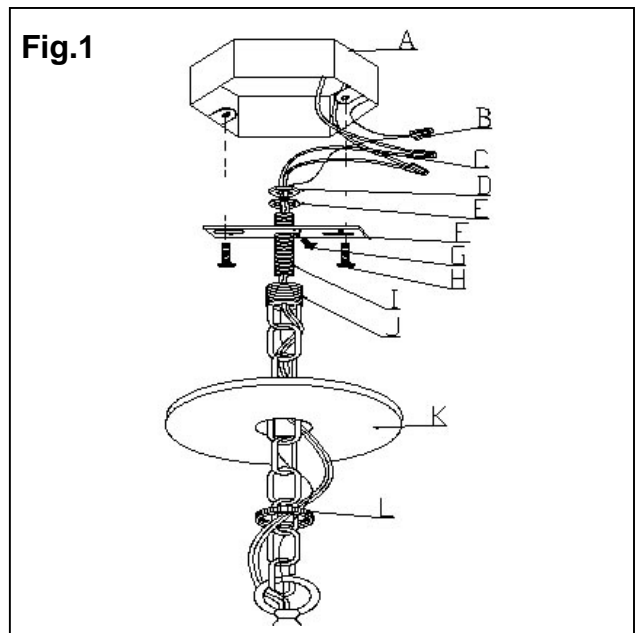


Fig.3

